

Adding 'wheels free' capabilities to Molnar Four Post Hoists

AIR JACKING BEAM

**M
O
L
N
A
R**



HOISTS



The Air Jacking Beam is for use with Molnar Four Post Hoists. Using a pair of Jacking Beams in tandem will provide a total 'wheels free' servicing options.

The Air Jacking Beam utilises an air-over-hydraulic pump unit for quick, simple, strong and reliable lifting.

The top beam includes sliding extension arms to suit a wide range of vehicles and pick-up points.




4 STABILISING PADS INCLUDED

FEATURES

- simple installation on Molnar Four Post Hoists
- 2 tonne lifting capacity per unit (4 tonne combined)
- 4 pick-up pads included
- robust air-operated pump with pressure valve to prevent overloading
- rail guide system allows easy unit positioning but restricts movement once load applied
- active mechanical load holding
- inbuilt scissor safety guard including side rack for storage of pads
- full range of accessories to ensure safe lifting for difficult applications, including extension pads and axle cradles

The Air Jacking Beam comes in two widths, for standard and wide 4 Post Hoists. 'A' denotes wide series.

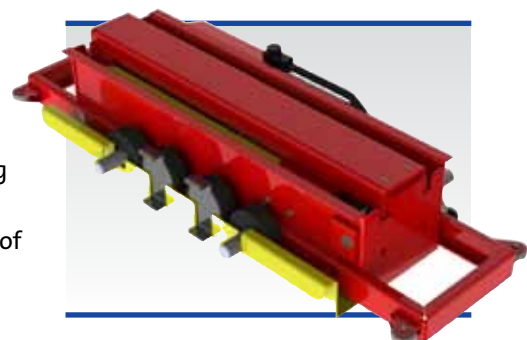


SIDE RACK FOR PAD STORAGE

MOLNAR



HOISTS

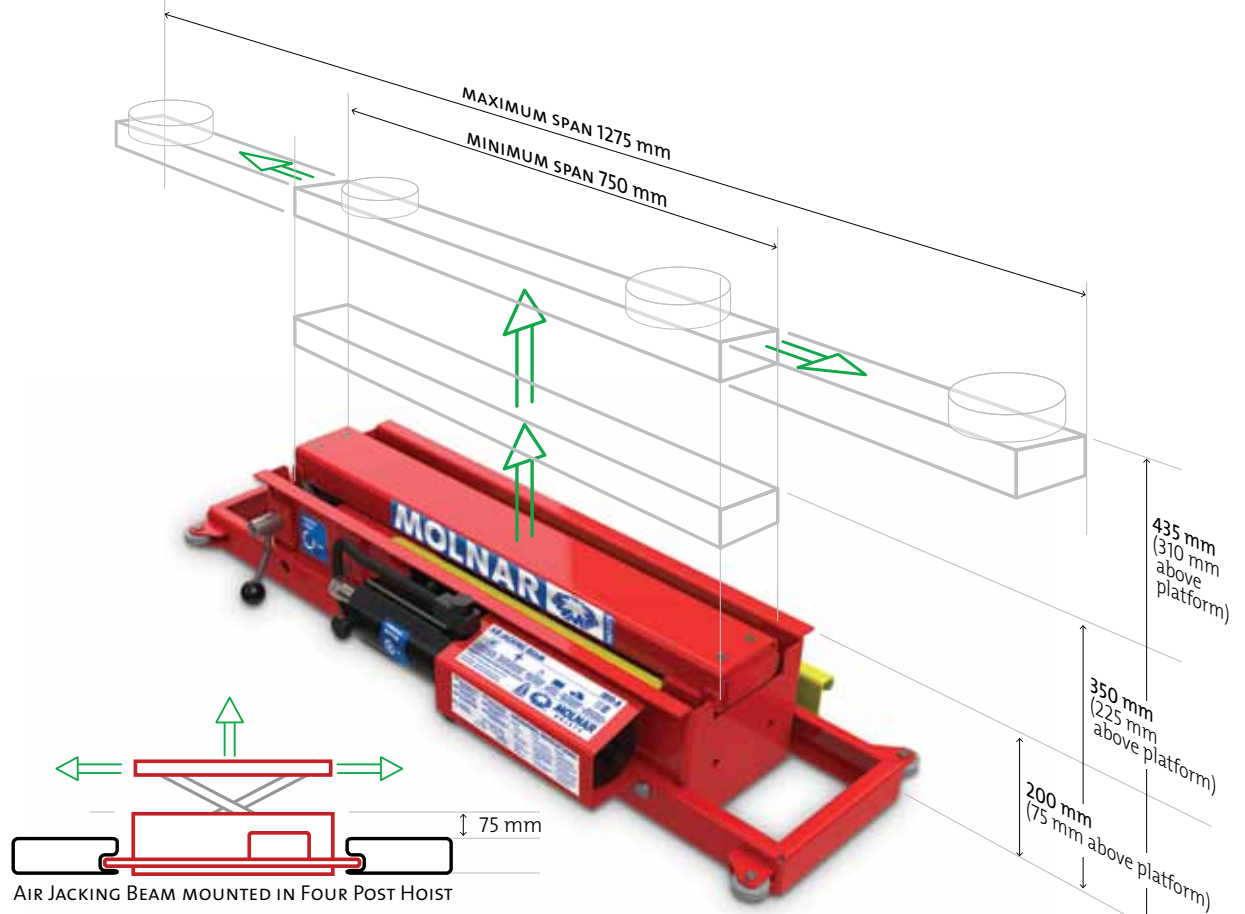


AIR JACKING BEAM MOUNTED IN FOUR POST HOIST

JB11 & JB11-A

PRODUCT SPECIFICATIONS

	JB11 standard	JB11-A wide
Overall Width	1045 mm	1145 mm
Capacity	2000 kg	<
Minimum Span (completely closed extension arms)	750 mm	<
Maximum Span (completely open extension arms)	1275 mm	<
Minimum Height (lowered)	75 mm	<
First lock position (height above platform top surface)	225 mm	<
Second lock position (height above platform top surface)	310 mm	<
Pads Included	2 x J3 pickup pads adjustable (ø100 mm)	<
	2 x J3BP rubber support pads (ø90 mm)	<
Air Supply	filtered and dry air at 7 BAR (100 psi)	<
Hydraulic Oil	high quality, 46 weight, anti-wear	<
Gross Weight	91 kg	94 kg
Shipping Dimensions	1100 x 430 x 330 mm	1200 x 430 x 330 mm

ACCESSORIES AND OPTIONS

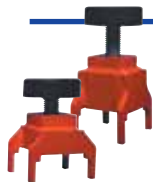

Extension Pick-Up Pad
thick solid rubber pad for secure height adjustment; attach to rails for greater number of pick-up points



Axle Pick-Up
attach to rails for stable pick-up on axle; cradle head prevents lateral movement of axle



Pick Up Pad, Small
beam mounted pad that prevents slipping and stabilises vehicle



Beam Pad
supports and stabilises vehicle. Made from solid, long-lasting vulcanised rubber



Rubber Blocks
rubberised lifting aid



Rubber Block Nest
Nest to house rubber blocks

As the policy of Molnar Hoists is one of continuous improvement, the manufacturer reserves the right to change specifications without notice.

For more information, please contact us or your local Molnar Representative

T 08 7120 8700 F 08 8346 0097

E sales@molnarhoists.com.au

www.molnarhoists.com.au

onwards & upwards

