

Designed to supplement the Molnar Hoist Four Post Hoist range, these lifting aids will improve workshop efficiency and safety

# FOUR POST ACCESSORIES

**M  
O  
L  
N  
A  
R**



**HOISTS**

**DRAFT  
4APR11  
07**

## JB11 & JB11A



### 'AIR JACKING BEAM'

Raise a vehicle for wheel free service options

**JB11A**  
Wide version for 'A' series

*Refer Air Jacking Beam Accessories brochure for related accessories*

	JB11	JB11A
Width	1100 mm	1200 mm
Max span	1275 mm	<
Min height (above platform)	75 mm	<
Max height (above platform)	310 mm	<

## 7252-023-01 & 7252-023-01 A



### 'JACK STAND'

Insert between platforms; can be turned upside down and used as a tool tray

**7252-023-01 A**  
Wide version for 'A' series

	7252-023-01	7252-023-01 A
Length	1045 mm	1145 mm
Width	225 mm	<
Height	60 mm	<

## 4488-S/W-66



### 'FOUR POST RUN-UPS, SHORT'

Run-up (single) for workshops where space is an issue

Length	815 mm
Width	500 mm

## 4488-S/W-66EL



### 'FOUR POST RUN-UPS, LONG'

Additional run-up (single) to create 'drive-through' capability

Length	1190 mm
Width	500 mm

## LBJ-04



### 'SLIP PLATES'

Slip Plates (pair) for vehicles with independent rear suspension

Length	1500 mm
Width	500 mm

*Refer Slip Plate brochure for more details*

As the policy of Molnar Hoists is one of continuous improvement, the manufacturer reserves the right to change specifications without notice.



For more information, please contact us or your local Molnar Representative

T 08 7120 8700 F 08 8346 0097  
E sales@molnarhoists.com.au  
www.molnarhoists.com.au

**onwards & upwards**

